



# 12 function massage wand

PRODUCT MANUAL

12 vibration modes

2 extra attachments

Flexible head

Made from silicone  
and ABS plastic

## Power

- The item is powered by 4 AA batteries.
- Unscrew the base of the item to insert the batteries.
- Follow the polarity instructions inside the battery case.



4 AA  
batteries

## How To Use

---

- Press the **ON/OFF** button to activate/deactivate the vibration.
- Press the **MODE** button quickly to cycle through 12 vibration modes.



Power  
button

## Cleaning and Care

---

- Use a toy cleaner/mild soap with water to clean the product before and after each use.
- Pat with a towel and allow it to air-dry completely.
- Use with the water-based lube only, no silicone lubricants.



## Warning

---

- Do not use on inflamed and injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes or for a use that has an adverse effect on any function of the body is prohibited.

**edenfantasy**  
THE NEW INTIMACY

[www.edenfantasy.com](http://www.edenfantasy.com)

Customer Service 24/7  
Phone: +1 (770) 604 - 1352