



**Adventure  
rechargeable  
remote control  
egg**

**PRODUCT MANUAL**

---

**7 massage modes**

---

**Quiet and powerful  
motor**

---

**USB rechargeable toy  
and remote**

---

**Waterproof**

---

**Made from silicone  
and ABS plastic**

## **Charging**

---



- For maximum pleasure charge the toy and remote before every use.
- Connect the included USB cable and insert the USB end into the wall adaptor or computer USB port (Computer must be turned on).
- The slow intermittent glow indicates charging in progress.
- A full charge takes up to 2 hours for 2 hours of play.
- Do not use the device while charging.




USB  
charging port

## How To Use

---

- Hold the button on the toy to enter the standby mode.
- Hold the  button on the remote to turn it on/off.
- Press the  button on the remote to cycle through 7 massage modes.
- A standby mode activates after the last vibration mode.
- Hold the button on the toy to turn it off.

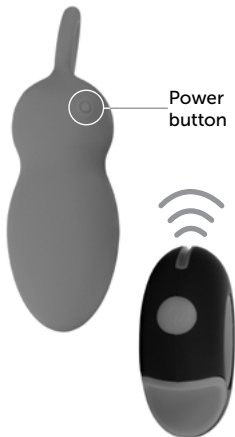

## Cleaning and Care

---

- Use a toy cleaner/mild soap with water to clean the product before and after each use.
- Pat with a towel and allow it to air-dry completely.
- Use with water-based lube only, no silicone lubricants.



## Warning

---

- Do not use on inflamed and injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes or for a use that has an adverse effect on any function of the body is prohibited.

**edenfantasy**  
THE NEW INTIMACY

[www.edenfantasy.com](http://www.edenfantasy.com)

Customer Service  
10 AM - 7 PM EST  
Phone: +1 (770) 604 - 1352