edénfantasys



Air touch

PRODUCT MANUAL

2 powerful motors

10 air pulse modes

10 massage modes

Waterproof

Made from silicone and ABS plastic

Charging

- For maximum pleasure charge before every use.
- Connect the included USB cable and insert the USB end into the wall adaptor or computer USB port (Computer must be turned on).
- The intermittent glow indicates charging in progress.
- A full charge takes up to 85 minutes for 70 minutes of play.
- Do not use the device while charging.



Magnetic USB charging port

How To Use

Without remote control

- Hold the *NV* button to turn the massage mode on/off.
- Press it quickly to cycle through 10 massage modes.
- Hold the 😝 button to turn the air pulse mode on/off.
- Press it quickly to cycle through 10 air pulse modes.



Cleaning and Care

- Use a toy cleaner/mild soap with water to clean the product before and after each use.
- Pat with a towel and allow it to air-dry completely.
- Use with the water-based lube only, no silicone lubricants.



Warning

- Do not use on inflamed and injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes or for a use that has an adverse effect on any function of the body is prohibited.

edénfantasys

www.edenfantasys.com

Customer Service 10 AM - 7 PM EST Phone: +1 (770) 604 - 1352