ed@nfantasys



10 thrusting modes

10 massage modes

Rotating beads

Waterproof IPX7

Made from silicone and ABS plastic

Charging

- For maximum pleasure, charge before every use.
- Connect the included USB magnetic charging cable and insert the USB end into the wall adaptor or computer USB port (Computer must be turned on) or power bank.
- The slow, intermittent glow indicates charging in progress.
- A full charge takes up to 160 minutes for 60 minutes of play.
- Do not use the device while charging.



Magnetic charging port

PRODUCT MANUAL

How To Use

- Hold the **b** button on the toy to turn on/off.
- Press it quickly to cycle through 10 thrusting modes.



Cleaning and Care

- Use a toy cleaner/mild soap with water to clean the product before and after each use.
- Pat with a towel and allow it to air-dry completely.
- Use with the water-based lube only, no silicone lubricants.
- Please avoid contact with silicone or silicone-containing materials as it may damage the product.



Warning

- Do not use on inflamed and injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes or for a use that has an adverse effect on any function of the body is prohibited.



www.edenfantasys.com

Customer Service 10 AM - 7 PM EST Phone: +1 (770) 604 - 1352