edénfantasys



Amorette

PRODUCT MANUAL

6 massage modes

Wearable design

Flexible wings

Waterproof IPX7

Made from silicone and ABS plastic

Charging

- For maximum pleasure charge before every use.
- Connect the included USB cable and insert the USB end into the wall adaptor or computer USB port (Computer must be turned on).
- The intermittent glow indicates charging in progress.
- A full charge takes up to 90 minutes for 60 minutes of play.
- Do not use the device while charging.



USB charging port

How To Use

Without remote control

- Hold the **b** button on the base of the toy to turn on/off.
- Fold the wings of the product and align it along your labia.
- Tuck each wing under each "lip", place it where it feels best, and slide up or down to adjust.
- Release the wings so they would "spread" a little bit under your labia lips, securing themselves exactly where you need them.
- Press the button quickly to cycle through 6 massage modes.

With the remote control

- Hold the button on the base of the toy to turn on/off.
- Hold the **b** button on the remote to turn it on
- Press the △ or ▼ button quickly to cycle through 6 massage modes.
- Hold the button to pause the vibration.



Cleaning and Care

- Use a toy cleaner/mild soap with water to clean the product before and after each use.
- Pat with a towel and allow it to air-dry completely.
- Use with water-based lube only, no silicone lubricants
- Please avoid contact with silicone or silicone-containing materials as it may damage the product.



Warning

- Do not use on inflamed and injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes or for a use that has an adverse effect on any function of the body is prohibited.



www.edenfantasvs.com

Customer Service 10 AM - 7 PM EST Phone: +1 (770) 604 - 1352