edénfantasys



Anal Pleaser Classic Vibrating Plug

PRODUCT MANUAL

10 massage modes

Tapered for easy insertion

Ergonomic base

Made from silicone and ABS plastic

Power

- The item is powered by 2 AAA batteries.
- Open the lid of the control pack and insert the batteries into the battery compartment.
- Follow the polarity instructions inside the battery case.
- When storing for an extended period, please remove batteries from the control pack.



How To Use

- Connect the plug to the control pack.
- Press the 😃 button to turn the toy on/off. The LED light will light up.
- Press the *W* button to cycle through 10 massage modes.



Cleaning and Care

- Disconnect the toy from the control pack.
- Use a toy cleaner/mild soap with water to clean the toy before and after each use.
- Pat with a towel and allow it to air-dry completely.
- Use with water-based lube only, no silicone lubricants.
- Do not let the water get inside the control pack since it is not waterproof.
- Wipe the control pack down with a wet cloth/tissue and dry it out completely.



Warning

- Do not use on inflamed and injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes or for a use that has an adverse effect on any function of the body is prohibited.

edénfantasys

www.edenfantasys.com

Customer Service from 10 AM to 7 PM EST. Phone: +1 (770) 604 - 1352