### edénfantasys



# **Big banger**

PRODUCT MANUAL

### 100 massage modes

2 powerful motors

**Memory function** 

**Realistic design** 

**Bunny clit attachment** 

Made from phthalate-free PVC

#### Charging

- For maximum pleasure charge before every use.
- Connect the included USB cable and insert the USB end into the wall adaptor or computer USB port (Computer must be turned on).
- The slow intermittent glow indicates charging in progress.
- A full charge takes up to 3 hours for 1 hour of play.
- Do not use the device while charging.



#### How To Use

- Hold the button or button to turn on/off.
- Press the button quickly to cycle through 10 massage modes for the top motor.
- Press the button quickly to cycle through 10 massage modes for the bottom motor.



Power Button **Cleaning and Care** 

- Use a toy cleaner/mild soap with water to clean the product before and after each use.
- Pat with a towel and allow it to air dry completely.
- Dust lightly with talc or cornstarch for better use.
- Store away from heat and sunlight.
- Use with the water-based lube only, no silicone lubricants.



#### Warning

- Do not use on inflamed and/or injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes and/or use that has an adverse effect on any function of the body is prohibited.

## edénfantasys

#### www.edenfantasys.com

Customer Service 10 AM - 7 PM EST Phone: +1 (770) 604 - 1352