



Big O flight

PRODUCT MANUAL

12 vibration modes

4 pulse wave modes

2 powerful motors


Wearable design

Memory function

**Made from silicone
and ABS plastic**

Charging


- For maximum pleasure, charge before every use.
- Connect the included USB cable and insert the USB end into the wall adaptor or computer USB port (Computer must be turned on).
- The slow intermittent glow indicates charging in progress.
- A full charge takes up to 3 hours for 1 hour of play.
- Do not use the device while charging.

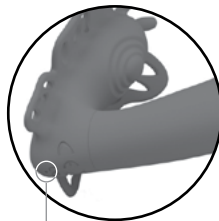


USB
charging port


How To Use

Without the remote control

- Hold the  button to turn on/off.
- Press it quickly to cycle through 12 vibration modes.

With the remote control

- Insert 1 AAA battery to power the remote.
- Press the  button to cycle through 12 powerful modes.

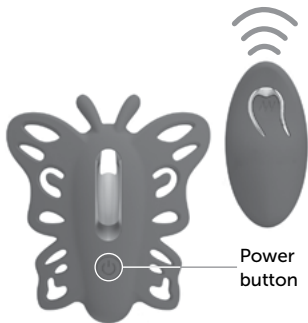

Cleaning and Care

- Use a toy cleaner/mild soap with water to clean the product before and after each use.
- Pat with a towel and allow it to air-dry completely.
- Do not get water inside the remote control as it is not waterproof.
- Use with the water-based lube only, no silicone lubricants.



Warning

- Do not use on inflamed and injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes or for a use that has an adverse effect on any function of the body is prohibited.

edenfantasy
THE NEW INTIMACY

www.edenfantasy.com

Customer Service 24/7
Phone: +1 (770) 604 - 1352