edénfantasys



Booty Throb

PRODUCT MANUAL

Pulsating membranes

- **3** pulsating intensities
 - 7 vibration modes

Remote-controlled

Travel-friendly

Waterproof

Made from silicone and ABS plastic

Charging

- For maximum pleasure, charge before every use.
- Connect the included USB cable and insert the USB end into the wall adaptor or computer USB port (Computer must be turned on).
- The slow, intermittent glow indicates charging in progress.
- A full charge takes up to 2 hours for 50 min of play.
- The remote is powered by 1 CR2032 battery (included). Slide the lid to open the battery compartment.



Magnetic charging port

How To Use

Without remote control

- Hold the 😃 button to turn on/off.
- Press it quickly to cycle through 7 vibration modes.

With the remote control

- Hold the 😃 button on the base for standby mode. The LED lights will flash.
- Press the 😃 button on the remote to turn on/off.
- Press the W button quickly to cycle through 7 vibration modes.



Cleaning and Care

- Use a toy cleaner/mild soap with water to clean the product before and after each use.
- Pat with a towel and allow it to air-dry completely.
- Do not get water inside the remote as it is not waterproof.
- Use with the water-based lube only, no silicone lubricants.



Warning

- Do not use on inflamed and injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes or for a use that has an adverse effect on any function of the body is prohibited.

edénfantasys

www.edenfantasys.com

Customer Service 24/7 Phone: +1 (770) 604 - 1352