edénfantasys



Booty Thruster

PRODUCT MANUAL

7 vibration functions

- **3 trusting speeds**
- Suction cup base

Made from soft TPR material and ABS plastic

Power

- The item is powered by 4 AA batteries.
- Rotate the lid counter-clockwise to open the battery compartment.
- Follow the polarity instructions inside the battery case.



How To Use

- Hold the 🖒 button to turn on/off.
- Press the *W* button quickly to cycle through 7 vibration modes.
- Press the **T** button to increase thrusting intensity.
- Press the button to reduce thrusting intensity.



Cleaning and Care

- Use a toy cleaner/mild soap with water to clean the product before and after each use.
- Pat with a towel and allow it to air-dry completely.
- Dust lightly with the corn starch for better use.
- Store away from heat and sunlight.
- Use with the water-based lube only, no silicone lubricants.



Warning

- Do not use on inflamed and injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes or for a use that has an adverse effect on any function of the body is prohibited.

edénfantasys

www.edenfantasys.com

Customer Service 24/7 Phone: +1 (770) 604 - 1352