



C-string remote control vibrating panty

PRODUCT MANUAL

10 vibration modes

**C-shape wearable
design**

Flexible construction

Made from ABS plastic

Remote-controlled


Power

- The item is powered by 2 AAA batteries.
- Unzip the satin cover to reveal the battery compartment.
- Open the lid to insert the batteries.
- Follow the polarity instructions inside the battery case.



2 AAA
batteries

How To Use

- Hold the  button to turn on/off.
- Press it quickly to cycle through 10 powerful modes.

With the remote control

- Insert 1 23A battery to power the remote.
- Hold the **ON/OFF** button to activate/deactivate the vibration.
- Press the **+** or **-** buttons to cycle through 10 powerful modes.



Cleaning and Care

- Unzip the satin cover and remove it.
- Wash the satin cover with mild soap with water before and after each use. Allow it to air-dry completely.
- Do not get water inside the vibrating unit as it is not waterproof. Wipe it down with the wet cloth/tissue and dry it out completely.
- Cover the vibrating unit with the satin cover and zip it up to finish the assembly.



Warning

- Do not use on inflamed and injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes or for a use that has an adverse effect on any function of the body is prohibited.

edenfantasy
THE NEW INTIMACY

www.edenfantasy.com

Customer Service 24/7
Phone: +1 (770) 604 - 1352