

# C-string vibrating panty

PRODUCT MANUAL

---

**10 vibration modes**

---

**C-shape wearable  
design**

---

**Flexible construction**

---

**Made from ABS plastic**

## **Power**

---


- The item is powered by 2 AAA batteries.
- Unzip the satin cover to reveal the battery compartment.
- Open the lid to insert the batteries.
- Follow the polarity instructions inside the battery case.




2 AAA  
batteries

## How To Use

---

- Hold the  button to turn on/off.
- Press it quickly to cycle through 10 vibration modes.

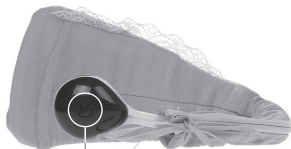

Power  
Button

## Cleaning and Care

---

- Unzip the satin cover and remove it.
- Wash the satin cover with mild soap and water before and after each use. Allow it to air-dry completely.
- Do not get water inside the vibrating unit as it is not waterproof. Wipe it down with the wet cloth/ tissue and dry it out completely.
- Cover the vibrating unit with the satin cover and zip it up to finish the assembly.



## Warning

---

- Do not use on inflamed and injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes or for a use that has an adverse effect on any function of the body is prohibited.

**edenfantasy**  
THE NEW INTIMACY

[www.edenfantasy.com](http://www.edenfantasy.com)

Customer Service 24/7  
Phone: +1 (770) 604 - 1352