



# Capella

PRODUCT MANUAL

---

**7 sucking modes**

---

**7 vibration modes**

---

**Memory function**

---

**Pleasure ticklers**


---

**Made from silicone  
and ABS plastic**

## Charging

---

- For maximum pleasure, charge before every use.
- Connect the included USB cable and insert the USB end into the wall adaptor or computer USB port (Computer must be turned on).
- The slow intermittent glow indicates charging in progress.
- A full charge takes up to 3 hours for 2 hours of play.
- Do not use the device while charging.

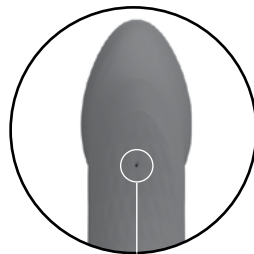

USB  
charging port

## How To Use

---

- Hold the **M** button to turn vibration on/off.
- Press it quickly to cycle through 7 vibration modes.

## Sucking motion

- Hold the **☺** button to turn the sucking motion on/off.
- Press it quickly to cycle through 7 sucking modes.



## Cleaning and Care

---

- Hold the **💧** button for 2-3 seconds while holding the toy under running water.
- Then hold the button again to empty the water out and finish cleaning.
- Do not press the sucking motion button when you clean the toy.
- Do not submerge the toy in the water.
- Use a toy cleaner/mild soap with water to clean the product before and after each use.
- Pat with a towel and allow it to air-dry completely.
- Use with the water-based lube only, no silicone lubricants.

## Warning

---

- Do not use on inflamed and injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes or for a use that has an adverse effect on any function of the body is prohibited.

**edenfantasy**  
THE NEW INTIMACY

[www.edenfantasy.com](http://www.edenfantasy.com)

Customer Service 24/7  
Phone: +1 (770) 604 - 1352