



9 massage modes

App operated

Waterproof IPX6


Made from silicone and ABS plastic

Connection Jazz

PRODUCT MANUAL

Charging


- For maximum pleasure, charge before every use.
- Connect to the included USB cable and insert the USB end into the wall adaptor or computer USB port (Computer must be turned on).
- The intermittent glow indicates that charging is in progress.
- A full charge takes up to 45 minutes for 45 minutes of play.
- Do not use the device while charging.

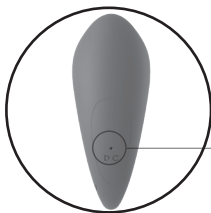

USB charging port

How To Use

- Hold the  button on the toy to turn on/off.
- Press it quickly to cycle through 9 massage modes.

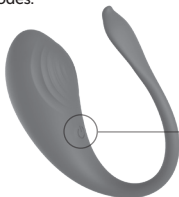

Power Button

App operation

- Download the **Love Spouse** app from Google Play or App Store (the app is free).



QR code:

- Open the app on your phone.
- Log in to your account or register a new one.
- Accept the User Agreement.
- The app will request access to **Bluetooth, Camera, Album, and Microphone** - please allow access in your phone settings.
- Tap the **+** to add a new device - this will connect the toy to your phone.
- Scan the QR code of your toy via the app. You can also add your device by entering the product code **5202**.



QR code:

- Tap the **"Toys"** tab on the app's homepage to begin playing.
- In the **"Remote mode"** tab, you can surf through vibrating patterns.
- Create your own pattern by tapping the  button and recording it as you tap the screen in your preferred rhythm.
Press **start/pause** buttons to turn **on/pause** pattern recording.
Press the  to finish recording or  to cancel it.

Press the **delete** button to delete the recorded pattern. Press **save to library** to save the new pattern.

- All patterns you have saved can be found in the **"Me"** tab, in the **"Frequency"** section.
- In **"Zen mode"**, you can enjoy the rhythmic vibration created by other users.
- In **"Game mode"**, you can enjoy vibration while playing a game. When two of the same fruits in the game touch, the toy's vibration is activated. The bigger the fruit, the stronger the vibration.
- In **"Video mode"**, you can choose a video from your phone by tapping the **"Select local video"** button. Select the pattern you like the most and enjoy it in sync with the video.
- In **"Rhythm mode"**, you can use the music playing on your phone (via any app) by tapping the **"Music recognition"** button to sync the vibration pattern to the music. Please note that you have to be in the **"Rhythm mode"** tab in the app for the toy to begin picking up music and activating.
- You can create your own pattern to match the rhythm of the music by tapping the  button and begin recording, matching your tapping to the tune. Press the **start/pause** to turn **on/pause** the recording pattern. Press the  to finish recording or the  to cancel it. Press the **delete** button to delete the recorded pattern. Press **save to library** to save the new pattern.
- In the **"Sketch mode"** tab, you can control the toy's vibration by drawing on the screen.

- Tap the  button and recreate the vibration pattern visually - use dots and lines, or whatever else you want to illustrate the desired vibration pattern. Press the  to finish recording or  to cancel it. Press the **delete** button to delete the recorded pattern. Press **save to library** to save the new pattern.
- In **"Shake mode"**, you can control the toy's vibration by shaking your phone at the desired rhythm and intensity.
- In **"Friend control"**, you can add contacts to the list of people who will be able to control your toy through the app. Tap  to add a new friend using an ID.
- Please note that your friend will also have to have an account in the app.
- Choose a contact from your contact list to create a playroom. Pick a type of interaction you want: **video chat** or **voice chat**.
- After you both enter the playroom, the other user will be able to connect to your vibrator, and you will be able to control their devices, too.
- In **"Remote mode"**, you may choose a pattern for them.
- In **"Sketch mode"**, you can control the vibration of their toy by drawing lines on the screen.
- In **"Shake mode"**, you can control the vibration of their toy by shaking the phone.
- In the **"Type what you want to say"** field, you can send messages to your contact as you play.

Cleaning and Care

- Use a toy cleaner/mild soap with water to clean the product before and after each use.
- Pat with a towel and allow it to air-dry completely.
- Use with water-based lubes only, no silicone lubricants.
- Please avoid contact with silicone or silicone-containing materials as it may damage the product.

Warning

- Do not use on inflamed and injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes or for a use that has an adverse effect on any function of the body is prohibited.

edenfantasys
THE NEW INTIMACY

www.edenfantasys.com

Customer Service
10 AM - 7 PM EST
Phone: +1 (770) 604 - 1352