



Dancing Rabbit

PRODUCT MANUAL

Rotating pleasure beads

6 intensities for rotating beads

6 vibration intensities for clit attachment

Pleasure bump for G-spot stimulation

Splashproof

Made from soft TPE material and ABS plastic

Charging

- For maximum pleasure, charge before every use.
- Twist off the cap at the base of the vibrator.
- Connect the included USB cable and insert the USB end into the wall adaptor or computer USB port (Computer must be turned on).
- The slow, intermittent glow indicates charging in progress.
- A full charge takes up to 90 minutes for 45 minutes of play.



USB charging port

How To Use

- Press the ▲ right button to turn on the vibration.
- Press the ▲ or ▼ right buttons to adjust vibration intensity.
- Press the ▼ button to turn off the vibration.
- Press the ▲ left button to turn on the rotation of the beads.
- Press the ▲ or ▼ buttons to adjust the intensity of rotating beads.
- Press the ▼ button to turn off the rotation of the beads.
- Press the R/S button to change the direction of rotating beads.



Power button

Cleaning and Care

- Use a toy cleaner/mild soap with water to clean the product before and after each use.
- Pat with a towel and allow it to air-dry completely.
- Dust lightly with the corn starch for better use.
- Store away from heat and sunlight.
- Use with the water-based lube. only, no silicone lubricants.



Warning

- Do not use on inflamed and injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes or for a use that has an adverse effect on any function of the body is prohibited.

edenfantasy
THE NEW INTIMACY

www.edenfantasy.com

Customer Service 24/7
Phone: +1 (770) 604 - 1352