



Date night panty vibrator

PRODUCT MANUAL

12 vibration modes

**Made from silicone
and ABS plastic**

Waterproof

Magnetic USB charger

Charging

- For maximum pleasure charge before every use.
- Connect the included USB cable and insert the USB end into the wall adaptor or computer USB port (Computer must be turned on).
- The slow intermittent glow indicates charging in progress.
- A full charge takes up to 2 hours for 1.5 hour of play.



Magnetic
charging port

How To Use

With the remote control

- Hold the vibrator's button to turn on/off.
- Press the  button quickly to cycle through 12 vibration modes.
- Press the  button to pause/start the vibration.



Cleaning and Care

- Use mild soap and water to clean the product.
- Pat with a towel and allow it to air dry completely.
- Use with the water-based lube only, no silicone lubricants.
- The item can be sterilized with a 5% bleach solution or alcohol.



Warning

- Do not use on inflamed and injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes or for a use that has an adverse effect on any function of the body is prohibited.

edenfantasy
THE NEW INTIMACY

www.edenfantasy.com

Customer Service 24/7
Phone: +1 (770) 604 - 1352