## edenfantasys



## **Deep rider**

PRODUCT MANUAL

## 10 massage modes

3 thrusting and rotating intensities

Realistic design

Strong suction cup

Remote controlled

Waterproof

Made from silicone and ABS plastic

## Charging

- For maximum pleasure charge before every use.
- Connect the included USB cable and insert the USB end into the wall adaptor or computer USB port (Computer must be turned on)
- The glow indicates charging in progress.
- A full charge takes up to 3 hours for 1 hour of play.
- Do not use the device while charging.
- The remote control is powered by 1 CR2032 battery (included)



charging port

### **How To Use**

#### Without remote control

- Hold the **U** button to turn on/off.
- Press it quickly to cycle through 10 powerful modes.

#### With the remote control

- Hold the **t** button on the toy to enter the standby mode. The LED light will flash.
- Hold the button to turn the remote on/off.
- Press the \$\mathscr{f}\$ button to cycle through 3 thrusting and rotation modes only.
- Press the M button on the remote to cycle through all 10 massage, thrusting, and rotation modes.



### **Cleaning and Care**

- Use a toy cleaner/mild soap with water to clean the product before and after each use.
- Pat with a towel and allow it to air-dry completely.
- Use with the water-based lube only, no silicone lubricants.



## Warning

- Do not use on inflamed and injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes or for a use that has an adverse effect on any function of the body is prohibited.

# edenfantasys

www.edenfantasys.com

Customer Service 24/7 Phone: +1 (770) 604 - 1352