



# Double exciter

PRODUCT MANUAL

---

**10 massage modes**

---

**2 powerful motors**

---

**Realistic design**

---

**Waterproof**

---

**Made from silicone**

## **Power**

---



- The item is powered by 2 AAA batteries.
- Unscrew the base of the toy to open the battery compartment.
- Follow the polarity instructions inside the battery case.
- When storing for an extended period, please remove batteries from the device.



2 AAA  
batteries

## How To Use

---

- Hold the  button to turn on/off. The LED light will flash.
- Press the  button quickly to cycle through 10 massage modes.



Power  
button

## Cleaning and Care

---

- Use a toy cleaner/mild soap with water to clean the product before and after each use.
- Pat with a towel and allow it to air dry completely.
- Use with water-based lube only, no silicone lubricants.



## Warning

---

- Do not use on inflamed and injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes or for a use that has an adverse effect on any function of the body is prohibited.

**edenfantasy**  
THE NEW INTIMACY

[www.edenfantasy.com](http://www.edenfantasy.com)

Customer Service  
10 AM - 7 PM EST  
Phone: +1 (770) 604 - 1352