ed@nfantasys



Double pleasure

PRODUCT MANUAL

Charging

 Insert the USB end into the wall adaptor or computer/smartphone USB port (the device must be turned on) to power the toy.

Double vibrating eggs

20 vibration modes

Powered by USB

Made from silicone and plastic



How To Use

- Press the 🖒 button to turn on/off.
- Press the button to cycle through 20 vibration modes.



Cleaning and Care

- Use a toy cleaner/mild soap with water to clean the product before and after each use.
- Pat with a towel and allow it to air-dry completely.
- Use with the water-based lube only, no silicone lubricants.
- Please avoid contact with silicone or silicone-containing materials as it may damage the product.



Warning

- Do not use on inflamed and injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes or for a use that has an adverse effect on any function of the body is prohibited.

edenfantasys

www.edenfantasys.com

Customer Service 10 AM - 7 PM EST Phone: +1 (770) 604 - 1352