# ed@nfantasys



Double Lix **Dual motors** 

7 vibration modes

The shaft heats up to 100 F

The vibrator is made from silicone

Waterproof

## Charging

- For maximum pleasure charge before every use.
- Connect to the included USB cable and insert the USB end into the wall adaptor or computer USB port (Computer must be turned on).
- The slow intermittent glow indicates charging in progress.
- A full charge takes up to 3 hours for 1 hour of play.



PRODUCT MANUAL

## **How To Use**

#### Without remote control

- Hold the  $\circlearrowleft$  button to turn on/off.
- Press quickly to cycle through 7 modes

#### With the remote control

- Press the 🖒 button on the remote.
- Use the button to cycle through 7 powerful modes.

### Heating

- The heating function activates automatically once the vibrator is on.
- Allow up to 5 mins for the shaft to warm up.



## **Cleaning and Care**

- Use mild soap and water to clean the product.
- Pat with a towel and allow it to air dry completely.
- Use with the water-based lube only, no silicone lubricants.
- The item can be sterilized with a 5% bleach solution or alcohol.



## Warning

- Do not use on inflamed and injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes or for a use that has an adverse effect on any function of the body is prohibited.



www.edenfantasys.com

Customer Service 24/7 Phone: +1 (770) 604 - 1352