## edénfantasys



Dream kisser

PRODUCT MANUAL

### 7 vibration modes

7 suction modes

Independent motors

**Rhinestone accents** 

Waterproof

Made from silicone and ABS plastic

#### Charging

- For maximum pleasure charge before every use.
- Connect the included USB magnetic charging cable and insert the USB end into the wall adaptor or computer USB port (Computer must be turned on).
- The slow, intermittent glow indicates charging in progress.
- A full charge takes up to 120 minutes for 80 minutes of play.



charging port

#### How To Use

- Hold the button in the form of a crystal to turn the toy on/off.
- Press the 🙆 button to cycle through 7 suction modes for the clit attachment.
- Hold it to turn the suction mode off.
- Press the bottom *NV* button to cycle through 7 vibration modes for main shaft.
- Hold it to turn the vibration mode off.

#### **Cleaning and Care**

- Use a toy cleaner/mild soap with water to clean the product before and after each use.
- Pat with a towel and allow it to air dry completely.
- Use with the water-based lube only, no silicone lubricants.



#### Warning

- Do not use on inflamed and injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes or for a use that has an adverse effect on any function of the body is prohibited.

# edénfantasys

#### www.edenfantasys.com

Customer Service 24/7 Phone: +1 (770) 604 - 1352

