ed@nfantasys



Dual Rose

10 sucking modes


10 thrusting modes

Splashproof

Made from silicone and ABS plastic

Charging

- For maximum pleasure charge before every use.
- Connect the included USB cable and insert the USB end into the wall adaptor or computer USB port (Computer must be turned on).
- The glow indicates charging in progress.
- A full charge takes up to 150 minutes for 60 minutes of play.
- Do not use the device while charging.

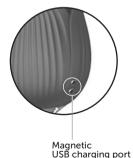

PRODUCT MANUAL

How To Use

- Hold the button to turn on/off for standby mode. The LED light will light up.
- Press it quickly to cycle through 10 thrusting modes.
- Press the O button quickly to cycle through 10 sucking modes.



Cleaning and Care

- Use a toy cleaner/mild soap with water to clean the product before and after each use
- Pat with a towel and allow it to airdry completely.
- Use with water-based lubes only, no silicone lubricants.
- Please avoid contact with silicone or silicone-containing materials as it may damage the product.

Warning

- Do not submerge the toy is splashproof but not waterproof.
- Keep water from entering the air-sucking opening as it will damage the product.
- Do not use on inflamed and injured areas.
- Discontinue use if feeling pain or discomfort
- Adult novelty only. Use for medical purposes or for a use that has an adverse effect on any function of the body is prohibited.



www.edenfantasys.com

Customer Service 10 AM - 7 PM EST Phone: +1 (770) 604 - 1352