



Dual teasers finger vibrator

PRODUCT MANUAL


7 vibration modes

Waterproof

**Made from soft TPR
material and ABS
plastic**

Power

- Insert 3 AAA batteries to power the control pack.
- Open the lid to insert the batteries.
- Follow the polarity instructions inside the battery case.

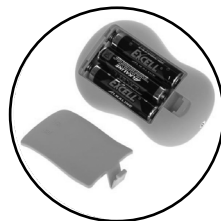


3 AAA
batteries

How To Use

With control pack

- Hold the big button on the control pack to turn on/off.
- Press it quickly to cycle through 7 powerful modes.
- Adjust the dial control to increase/reduce vibration intensity.

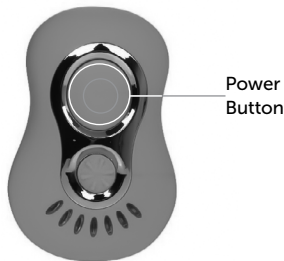

Cleaning and Care

- Use a toy cleaner/mild soap with water to clean the product before and after each use.
- Pat with a towel and allow it to air-dry completely.
- Use with the water-based lube only, no silicone lubricants.



Warning

- Do not use on inflamed and injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes or for a use that has an adverse effect on any function of the body is prohibited.

edenfantasy
THE NEW INTIMACY

www.edenfantasy.com

Customer Service 24/7
Phone: +1 (770) 604 - 1352