



Dual Igniter

PRODUCT MANUAL

10 massage modes

Two powerful motors

Turbo function

Remote control

Waterproof

Made from silicone

Charging


- For maximum pleasure charge before every use.
- Connect the included USB cable and insert the USB end into the wall adaptor or computer USB port (Computer must be turned on).
- The slow intermittent glow indicates charging in progress.
- A full charge takes up to 90 minutes for 100 minutes of play.
- Do not use the device while charging.







USB
Charging Port


How To Use

Without remote control

- Hold the  button on the base of the toy to turn on/off.
- Press it quickly to cycle through 10 massage modes.

With remote control

- Insert 1 CR2032 battery to power the remote.
- Hold the  button on the base of the toy for standby mode.
- Press the  button on the remote.
- Press the  button to cycle through 10 massage modes.
- Press the  button for an intensity burst (fades after 25 secs).
- The remote will auto power-off if there is no operation on it in 2 minutes.

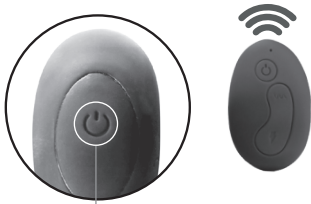

Power Button

Cleaning and Care

- Use a toy cleaner/mild soap with water to clean the product before and after each use.
- Pat with a towel and allow it to air-dry completely.
- Use with the water-based lube only, no silicone lubricants.
- Please avoid contact with silicone or silicone-containing materials as it may damage the product.



Warning

- Do not use on inflamed and injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes or for a use that has an adverse effect on any function of the body is prohibited.

edenfantasys
THE NEW INTIMACY

www.edenfantasy.com

Customer Service 10 AM - 7 PM EST
Phone: +1 (770) 604 - 1352