



# G-Surf

---

**G-spot attachment**

---

**7 vibration modes**

---

**Strong suction cup**

---

**Remote-controlled**

---

**Waterproof**

---

**Travel-friendly**

---

**Adjustable harness  
waist up to 45"**


---

**Made from silicone,  
ABS plastic, steel, and  
polyester**

## Charging

---


- For maximum pleasure, charge before every use.
- Connect the included USB magnetic charging cable and insert the USB end into the wall adaptor or computer USB port (Computer must be turned on) or power bank.
- The slow, intermittent glow indicates charging in progress.
- A full charge takes up to 120 minutes for 80 minutes of play.
- The remote is powered by 1 CR2032 battery (included). Slide the lid to open the battery compartment.

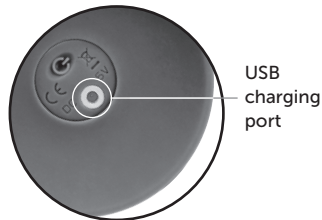




## How To Use

---

### Without remote control

- Hold the  button to turn on/off.
- Press it quickly to cycle through 7 vibration modes.

### With the remote control

- Hold the  button on the base for standby mode. The LED lights will flash.
- Press the  button on the remote to turn on/off.
- Press the  button quickly to cycle through 7 vibration modes.



## Cleaning and Care

---

- Use a toy cleaner/mild soap with water to clean the product before and after each use.
- Pat with a towel and allow it to air-dry completely.
- Use with the water-based lube only, no silicone lubricants.
- Do not get water inside the remote as it is not waterproof.



## Warning

---

- Do not use on inflamed and/or injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes and/or use that has an adverse effect on any function of the body is prohibited.

**edenfantasy**  
THE NEW INTIMACY

[www.edenfantasy.com](http://www.edenfantasy.com)

Customer Service 24/7  
Phone: +1 (770) 604 - 1352