



Eden dual caress finger motion vibrator

PRODUCT MANUAL

3 finger motion modes

7 vibration modes

**Pleasure nubs and
ridges**

**Curved tip for G-spot
stimulation**

**Made from silicone
and ABS plastic**


Power

- The item is powered by 2 AAA batteries.
- Unscrew the base of the item to insert the batteries.
- Follow the polarity instructions inside the battery case.



2 AAA
batteries

How To Use

- Hold the  button to turn on/off.
- Press the **M** button to cycle through 7 vibration modes.
- The finger motion modes will be activated along with the vibration modes.



Power
button

Cleaning and Care

- Use a toy cleaner/mild soap with water to clean the product before and after each use.
- Pat with a towel and allow it to air-dry completely.
- Use with the water-based lube only, no silicone lubricants.
- The item can be sterilized with a 5% bleach solution or alcohol.



Warning

- Do not use on inflamed and injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes or for a use that has an adverse effect on any function of the body is prohibited.

edenfantasy
THE NEW INTIMACY

www.edenfantasy.com

Customer Service 24/7
Phone: +1 (770) 604 - 1352