

edenfantasys
THE NEW INTIMACY



Eden dual tongue vibrator

PRODUCT MANUAL

2 motors

3 vibration intensities

**3 beads
rotation intensities**

Two-way rotation

Splashproof

**Made from
soft TPR material
and ABS plastic**

Power

- The item is powered by 3 AAA batteries.
- Unscrew the base to insert the batteries.
- Follow the polarity instructions inside the battery case.



3 AAA
batteries

How To Use

- Hold the **+** button to activate the vibration or rotation.
- Press the **+** button to increase the intensity of the vibration or rotation.
- Press the **-** button to reduce the intensity of the vibration or rotation.
- Press the **R/S** to change the direction of rotating beads.
- Hold the **-** button to deactivate the vibration or rotation.



Power button

Cleaning and Care

- Use a toy cleaner/mild soap with water to clean the product before and after each use.
- Pat with a towel and allow it to air-dry completely.
- Dust lightly with the corn starch for better use.
- Store away from heat and sunlight.
- Use with the water-based lube



Warning

- Do not use on inflamed and injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes or for a use that has an adverse effect on any function of the body is prohibited.

edenfantasy
THE NEW INTIMACY

www.edenfantasy.com

Customer Service 24/7
Phone: +1 (770) 604 - 1352