



**Eden multispeed  
waterproof  
rabbit**

**PRODUCT MANUAL**

---

**Two motors**

---

**Multispeed vibration**

---

**Realistic head**

---

**Bunny clit attachment**

---

**Waterproof**

---

**Made from soft TPR  
and ABS plastic**

---

**Power**

- The item is powered by 2 AA batteries.
- Unscrew the base of the item to insert the batteries.
- Follow the polarity instructions inside the battery case.



2 AA  
batteries

## How To Use

---

- Rotate the dial base to turn vibration on/off.
- Adjust the dial base to increase/reduce the vibration intensity.



## Cleaning and Care

---

- Use a toy cleaner/mild soap with water to clean the product before and after each use.
- Please do not submerge the toy in the water.
- Pat with a towel and allow it to air-dry completely.
- Dust lightly with the corn starch for better use.
- Store away from heat and sunlight.
- Use with the water-based lube only, no silicone lubricants.



## Warning

---

- Do not use on inflamed and injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes or for a use that has an adverse effect on any function of the body is prohibited.

**edenfantasys**  
THE NEW INTIMACY

[www.edenfantasys.com](http://www.edenfantasys.com)

Customer Service 24/7  
Phone: +1 (770) 604 - 1352