



**Eden Play  
waterproof  
vibrating  
bullet  
10 functions**

**PRODUCT MANUAL**

---

**10 massage modes**

---

**Quiet and powerful  
motor**

---

**Splashproof**

---

**Made from ABS plastic**

## **Power**

---

- The item is powered by 1 AAA battery.
- Unscrew the base of the bullet to open the battery compartment.
- Follow the polarity instructions inside the battery case.



AAA battery

## How To Use

---

- Hold the button to turn on/off.
- Press it quickly to cycle through 10 massage modes.



Power Button

## Cleaning and Care

---

- Use a toy cleaner/mild soap with water to clean the product before and after each use.
- Pat with a towel and allow it to air-dry completely.
- Use with water-based, silicone, or oil-based lubricants.



## Warning

---

- Do not use on inflamed and injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes or for a use that has an adverse effect on any function of the body is prohibited.

**edenfantasy**  
THE NEW INTIMACY

[www.edenfantasy.com](http://www.edenfantasy.com)

Customer Service 10 AM - 7 PM EST  
Phone: +1 (770) 604 - 1352