



Eden Thrusting Butterfly Vibrator

PRODUCT MANUAL

Thrusting shaft

7 vibration modes

**6 beads
rotation intensities**

**Made from
soft TPR material
and ABS plastic**

Power

- The item is powered by 4 AA batteries.
- Open the lid to insert the batteries.
- Follow the polarity instructions inside the battery case.



4 AA batteries

How To Use

- Press the **ON/OFF** button to activate/deactivate the toy.
- Press the **7** button quickly to cycle through vibration modes.
- Press the **+** button to increase the intensity of rotating beads.
- Press the **-** button to reduce the intensity of rotating beads.

Power button



Cleaning and Care

- Use a toy cleaner/mild soap with water to clean the product before and after each use.
- Pat with a towel and allow it to air-dry completely.
- Dust lightly with the corn starch for better use.
- Store away from heat and sunlight.
- Use with the water-based lube only, no silicone lubricants.



Warning

- Do not use on inflamed and injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes or for a use that has an adverse effect on any function of the body is prohibited.

edenfantasys
THE NEW INTIMACY

www.edenfantasys.com

Customer Service 24/7
Phone: +1 (770) 604 - 1352