



Elektra Luxe

PRODUCT MANUAL

10 massage modes

**5 electro-stim
impulse modes**

Made from silicone

Charging


- For maximum pleasure charge before every use.
- Connect the included USB cable and insert the USB end into the wall adaptor or computer USB port (Computer must be turned on).
- The slow intermittent glow indicates charging in progress.
- A full charge takes up to 100 minutes for 75 minutes of play.
- Do not use the device while charging.




USB charging port

How To Use

TO ENSURE CONNECTIVITY, PLEASE APPLY WATER-BASED LUBE TO THE AREA OF STIMULATION. IF THE SKIN IS TOO DRY, THE IMPULSE MIGHT NOT PASS.

- Hold the  button to turn on/off.
- Press the **w2** button quickly to cycle through 10 massage modes.
- Press the **w1** button quickly to cycle through 5 e-stim modes.

CONTACT POINTS ON THE PERINEUM STIMULATOR AND THE SHAFT NEED TO TOUCH YOUR SKIN AT THE SAME TIME TO CREATE A CONNECTION THAT WILL TRANSMIT E-STIM IMPULSES.

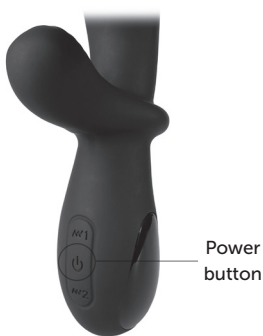

Cleaning and Care

- Use a toy cleaner/mild soap with water to clean the product before and after each use.
- Pat with a towel and allow it to air-dry completely.
- Use with water-based lube only, no silicone lubricants.
- Please avoid contact with silicone or silicone-containing materials as it may damage the product.
- Store away from other toys to avoid chemical reactions and damage to either toy.

Warning

- Consult your doctor before use if you have a heart condition/wear a heart monitor.
- Do not turn on in/near water.
- Do not use on inflamed and injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes or for a use that has an adverse effect on any function of the body is prohibited.

edenfantasy
THE NEW INTIMACY

www.edenfantasy.com

Customer Service
10 AM - 7 PM EST
Phone: +1 (770) 604 - 1352