



# Elektra plus nipple clamps

PRODUCT MANUAL

**7 vibration modes**


**3 electro-stim impulse  
modes**

**Made from ABS plastic  
and metal**

## **Power**

---

- Insert 2 AAA batteries to power the control pack.
- Unscrew the base of the control pack to insert the batteries.
- Follow the polarity instructions inside the battery case.

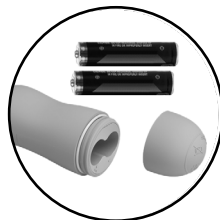


2 AAA  
batteries

## How To Use

---

TO ENSURE CONNECTIVITY, PLEASE APPLY WATER-BASED LUBE TO THE AREA OF STIMULATION. IF THE SKIN IS TOO DRY, THE IMPULSE MIGHT NOT PASS

- Hold the **M** button to activate the vibration.
- Press it quickly to cycle through 7 vibration modes.
- Hold the **⚡** button to activate the electro-stimulation.
- Press it quickly to cycle through 3 e-stim modes.

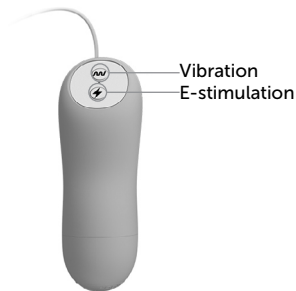

## Cleaning and Care

---

- Use a toy cleaner/mild soap with water to clean the product before and after each use.
- Pat with a towel and allow it to air-dry completely.
- Use with the water-based lube only, no silicone lubricants.



## Warning

---

- **Consult your doctor before use if you have a heart condition/wear a heart monitor.**
- Do not turn on in/near water.
- Do not use on inflamed and injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes or for a use that has an adverse effect on any function of the body is prohibited.

**edenfantasy**  
THE NEW INTIMACY

[www.edenfantasy.com](http://www.edenfantasy.com)

Customer Service 24/7  
Phone: +1 (770) 604 - 1352