

Elektra plus finger vibe

PRODUCT MANUAL

Electro-stim impulse

7 vibration modes

Made from silicone

24-karat gold-plated E-stim spot

Charging

- For maximum pleasure charge before every use.
- Connect the included USB cable and insert the USB end into the wall adaptor or computer USB port (Computer must be turned on).
- The slow intermittent glow indicates charging in progress.
- A full charge takes up to 3 hours for 1 hour of play.



How To Use

TO ENSURE CONNECTIVITY, PLEASE APPLY WATER-BASED LUBE TO THE AREA OF STIMULATION. IF THE SKIN IS TOO DRY, THE IMPULSE MIGHT NOT PASS.

- Hold the 🖒 button to turn on/off.
- Press it quickly to cycle through 7 vibration modes
- The electro-stim impulse will be activated along with the vibration.

PLEASE WEAR RUBBER OR LATEX
GLOVES UNDERNEATH THE E-PULSE
FINGER VIBRATOR TO ENSURE
INSULATION FOR EXTRA PROTECTION.



Power button

Cleaning and Care

- Use a toy cleaner/mild soap with water to clean the product before and after each use.
- Pat with a towel and allow it to air-dry completely.
- Use with the water-based lube only, no silicone lubricants.
- The item can be sterilized with a 5% bleach solution or alcohol.



Warning

- Consult your doctor before use if you have a heart condition/wear a heart monitor
- Do not turn on in/near water
- Do not use on inflamed and injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes or for a use that has an adverse effect on any function of the body is prohibited.



www.edenfantasys.com

Customer Service 24/7 Phone: +1 (770) 604 - 1352