# ed@nfantasys



Element

PRODUCT MANUAL

## 9 vibration modes

Sleek head

Discreet design

Waterproof

Made from metal and silicone

## Charging

- For maximum pleasure, charge before every use.
- Connect the included USB cable and insert the USB end into the wall adaptor or computer USB port (Computer must be turned on)
- The slow, intermittent glow indicates charging in progress.
- A full charge takes up to 1.5 hours for 1 hour of play.
- Do not use the device while charging.



#### **How To Use**

- Hold the 🖒 button to turn on/off.
- Press it quickly to cycle through 9 vibration modes.



#### **Cleaning and Care**

- Use a toy cleaner/mild soap with water to clean the product before and after each use.
- Pat with a towel and allow it to air-dry completely.
- Use with the water-based lube only, no silicone lubricants.
- The item can be sterilized with a 5% bleach solution or alcohol.



# Warning

- Do not use on inflamed and injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes or for a use that has an adverse effect on any function of the body is prohibited.



www.edenfantasys.com

Customer Service 24/7 Phone: +1 (770) 604 - 1352