



## Essential glider

PRODUCT MANUAL

**Multi-speed vibrations**

**7" long**

**Tapered tip**

**Made from ABS plastic**

### **Power**

- The item is powered by 2 C batteries.
- Unscrew the base of the item to insert the batteries.
- Follow the polarity instructions inside the battery case.



2C  
batteries

## How To Use

---

- Rotate the dial base to turn vibration on/off.
- Adjust the dial base to increase/ reduce the vibration intensity.



Dial  
base

## Cleaning and Care

---

- Use a toy cleaner/mild soap with water to clean the product before and after each use.
- Pat with a towel and allow it to air-dry completely.
- Use with water, silicone or oil-based lubricant.



## Warning

---

- Do not use on inflamed and injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes or for a use that has an adverse effect on any function of the body is prohibited.

**edenfantasy**  
THE NEW INTIMACY

[www.edenfantasy.com](http://www.edenfantasy.com)

Customer Service 24/7  
Phone: +1 (770) 604 - 1352