



Exalter

PRODUCT MANUAL

3 powerful motors

9 rotation modes

9 massage modes

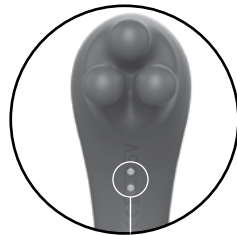
Ergonomic design

Waterproof

**Made from silicone
and ABS plastic**



Charging

- For maximum pleasure charge before every use.
- Connect the included USB cable and insert the USB end into the wall adaptor or computer USB port (Computer must be turned on).
- The glow indicates charging in progress.
- A full charge takes up to 3 hours for 50 minutes of play.
- Do not use the device while charging.



Magnetic USB
charging port

How To Use

- Hold the top  button to turn the clitoral end on/off.
- Press it quickly to cycle through 9 massage modes for the upper nub and 9 rotation modes for two bottom nubs.
- Hold the bottom  button to turn the G-spot end on/off.
- Press it quickly to cycle through 9 massage modes.



Power
button

Cleaning and Care

- Use a toy cleaner/mild soap with water to clean the product before and after each use.
- Pat with a towel and allow it to air-dry completely.
- Use with the water-based lube only, no silicone lubricants.



Warning

- Use a toy cleaner/mild soap with water to clean the product before and after each use.
- Pat with a towel and allow it to air-dry completely.
- Use with the water-based lube only, no silicone lubricants.

edenfantasy
THE NEW INTIMACY

www.edenfantasy.com

Customer Service 24/7
Phone: +1 (770) 604 - 1352