



Exo

10 vibration modes

5 suction modes

Realistic opening

**Textured tongue for
extra stimulation**

**Made from skin-like
TPE, silicone and ABS
plastic**




Charging


- For maximum pleasure, charge before every use.
- Connect the included USB cable and insert the USB end into the wall adaptor or computer USB port (Computer must be turned on).
- The slow intermittent glow indicates charging in progress.
- A full charge takes up to 1.5 hours for 40 minutes of play.
- Take the USB cable out after the charging is complete and keep it away from metal items.
- Do not use the device while charging.



Magnetic
charging port

How To Use

- Hold the  button to turn on/off.
- Press the  button quickly to cycle through 10 vibration modes.
- Press the  button quickly to cycle through 5 suction modes.

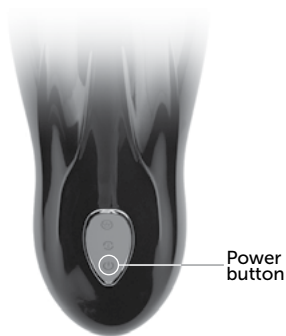

Cleaning and Care

- Take the sleeve out of the plastic case for thorough cleaning.
- Use a toy cleaner/mild soap with water to clean the sleeve before and after each use.
- Pat the sleeve with a towel and allow it to air-dry completely.
- Dust lightly with the corn starch for better use. Store away from heat and sunlight.
- Do not get water inside the case as it is not waterproof. Wipe it down with the wet cloth/tissue and dry it out completely before inserting the sleeve.
- Use with the water-based lube only, no silicone lubricants.

Warning

- Do not use on inflamed and injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes or for a use that has an adverse effect on any function of the body is prohibited.

edenfantasy
THE NEW INTIMACY

www.edenfantasy.com

Customer Service 24/7
Phone: +1 (770) 604 - 1352