edenfantasys



Feel The G gyrating silicone vibrator

PRODUCT MANUAL

10 massage modes

Realistic design

Ticklers for clit stimulation

Waterproof

Made from silicone and ABS plastic

Power

- The item is powered by 3 AAA batteries.
- Unscrew the base to insert the batteries.
- Follow the polarity instructions inside the battery case.
- When storing for an extended period, please remove batteries from the toy.



How To Use

- Hold the button to turn on/off.
- Press it quickly to cycle through 10 powerful modes.



Cleaning and Care

- Use a toy cleaner/mild soap with water to clean the product before and after each use.
- Pat with a towel and allow it to air dry completely.
- Use with the water-based lube only, no silicone lubricants.



Warning

- Do not use on inflamed and injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes or for a use that has an adverse effect on any function of the body is prohibited.

edenfantasys

www.edenfantasys.com

Customer Service 10 AM - 7 PM EST Phone: +1 (770) 604 - 1352