



10 vibration modes

**Discreet wearable
design**

**Made from silicone
and ABS plastic**

Waterproof

Flirt

PRODUCT MANUAL

Charging


- For maximum pleasure charge before every use.
- Connect the included USB cable and insert the USB end into the wall adaptor or computer USB port (Computer must be turned on).
- The slow intermittent glow indicates charging in progress.
- A full charge takes up to 3 hours for 1 hour of play.





 



USB
charging port


How To Use

Without remote control

- Hold the  button to turn on/off.
- Press it quickly to cycle through 10 vibration modes.

With the remote control

- The remote is powered by 1 CR2032 battery (included). Slide the lid to open the battery compartment.
- The toy should be turned on. Hold the  button on the toy to turn it on.
- Hold the  button on the remote to pair with the toy.
- Use the  or  buttons to cycle through 10 vibration modes.
- Hold the  button on the remote to stop the vibration.
- Hold the  button on the toy to turn it off.

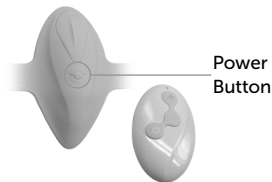

Cleaning and Care

- Use a toy cleaner/mild soap with water to clean the product before and after each use.
- Pat with the towel and allow it to air-dry completely.
- Do not get water inside the remote control as it is not waterproof
- Use with the water-based lube only, no silicone lubricants.
- The item can be sterilized with a 5% bleach solution or alcohol.



Warning

- Do not use on inflamed and injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes or for a use that has an adverse effect on any function of the body is prohibited.

edenfantasy
THE NEW INTIMACY

www.edenfantasy.com

Customer Service 24/7
Phone: +1 (770) 604 - 1352