ed@nfantasys




Flower Kiss

7 tongue flicking modes

Made from silicone and ABS plastic

Power

- The item is powered by 2 AAA batteries.
- Open the control pack to insert the batteries.
- Follow the polarity instructions inside the battery case.

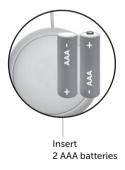

How To Use

- Hold the control pack's button to turn on/off.
- Press quickly to cycle through 7 modes.



Cleaning and Care

- Use a toy cleaner/mild soap with water to clean the sleeve before and after each use.
- Pat with a towel and allow it to air dry completely.
- Use with the water-based lube only, no silicone lubricants.
- The item can be sterilized with a 5% bleach solution or alcohol.



Warning

- Do not use on inflamed and injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes or for a use that has an adverse effect on any function of the body is prohibited.



www.edenfantasys.com

Customer Service 24/7 Phone: +1 (770) 604 - 1352