



# Fluttering thruster

PRODUCT MANUAL

---

**6 thrusting modes**

---

**Multiple massage  
modes**

---

**Two-direction rotation**

---

**Pleasure bump for  
G-spot stimulation**

---

**Waterproof**

---

**Made from skin-like  
TPR and ABS plastic**

## **Power**

---

- The item is powered by 4 AAA batteries.
- Unscrew the base to open the battery compartment.
- Follow the polarity instructions inside the battery case.
- When storing for an extended period, please remove batteries from the device.



4 AAA  
batteries

## How To Use

---

- Press the left ▲ button to turn the thrusting and rotation mode on and to cycle through 6 different modes.
- Press the left ▼ button to return to the previous mode. Hold it to turn the thrusting and rotation mode off.
- Press the right ▲ button to turn the massage mode on and to cycle through multiple modes for clit attachment.
- Press the right ▼ button to return to the previous mode. Hold it to turn the massage mode off.
- Press the **R/S** button to change the direction of rotating beads.



Power button

## Cleaning and Care

---

- Use a toy cleaner/mild soap with water to clean the product before and after each use.
- Pat with a towel and allow it to air-dry completely.
- Store away from other toys to avoid chemical reactions and damage to either toy.
- Dust lightly with talc or cornstarch for better use.
- Store away from heat and sunlight.
- Use with water-based lube only, no silicone lubricants.



## Warning

---

- Do not use on inflamed and injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes or for a use that has an adverse effect on any function of the body is prohibited.

**edenfantasy**  
THE NEW INTIMACY

[www.edenfantasy.com](http://www.edenfantasy.com)

Customer Service  
10 AM - 7 PM EST  
Phone: +1 (770) 604 - 1352