edénfantasys



Foreplay remote control egg

PRODUCT MANUAL

10 vibration patterns

Travel-friendly

Remote-controlled

Made from silicone and ABS plastic


Power

- The item is powered by 2 AAA batteries.
- Unscrew the base of the item to insert the batteries.
- The remote control is powered by 2 AAA batteries.
- Open the lid to insert the batteries.
- Follow the polarity instructions inside the battery case.



How To Use

- Press the 🙂 button on the remote control to turn on/off.
- Press the () button to cycle through 10 vibration modes.

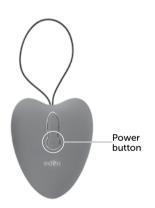

Cleaning and Care

- Use a toy cleaner/mild soap with water to clean the product before and after each use.
- Pat with a towel and allow it to air-dry completely.
- Use with the water-based lube only, no silicone lubricants.



Warning

- Do not use on inflamed and injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes or for a use that has an adverse effect on any function of the body is prohibited.

edénfantasys

www.edenfantasys.com

Customer Service 24/7 Phone: +1 (770) 604 - 1352