# edénfantasys



**Freestyle** 

PRODUCT MANUAL

### Oral sex imitation

10 air pulse modes

**Travel case** 

Made from silicone and ABS plastic

## Charging

- For maximum pleasure charge before every use.
- Place the toy in the charging case.
- Connect the included USB cable and insert the USB end into the wall adaptor or computer USB port (The computer must be turned on).
- The glow indicates charging in progress.
- A full charge takes up to 3 hours for 1 hour of play.
- Do not use the device while charging.



USB charging port

#### **How To Use**

- Hold the **b** button to turn the toy on/off. The LED light will light up.
- Press it quickly to cycle through 10 air pulse modes.
- Press the + button to increase the intensity of pulsation.
- Press the button to reduce the intensity of pulsation.



#### **Cleaning and Care**

- Use a toy cleaner/mild soap with water to clean the product before and after each use.
- Pat with a towel and allow it to air-dry completely.
- Use with water-based lube only, no silicone lubricants.



## Warning

- Do not use on inflamed and injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes or for a use that has an adverse effect on any function of the body is prohibited.



www.edenfantasys.com

Customer Service 10 AM - 7 PM EST Phone: +1 (770) 604 - 1352