



G-Bud

PRODUCT MANUAL

7 vibration modes

**Bulbous head for
G-spot stimulation**

Beginner-friendly

Waterproof

Made from ABS plastic


Charging

- For maximum pleasure, charge before every use.
- Connect the included USB cable and insert the USB end into the wall adaptor or computer USB port (Computer must be turned on).
- The slow, intermittent glow indicates charging in progress.
- A full charge takes up to 2.5 hours for 1.5 hours of play.



USB charging port

How To Use

- Hold the  button to turn the power on/off.
- Press it quickly to cycle through 7 vibration modes.



Power
button

Cleaning and Care

- Use a toy cleaner/mild soap with water to clean the product before and after each use.
- Pat with a towel and allow it to air-dry completely.
- Use with water, silicone, or oil-based lubricant.



Warning

- Do not use on inflamed and injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes or for a use that has an adverse effect on any function of the body is prohibited.

edenfantasy
THE NEW INTIMACY

www.edenfantasy.com

Customer Service 24/7
Phone: +1 (770) 604 - 1352