



G-fun

PRODUCT MANUAL

10 vibration modes

Flexible bulged head

**Made from silicone
and ABS plastic**

Waterproof

Charging

- The item is powered by 1 AA battery.
- Unscrew the base of the item to insert the battery.
- Follow the polarity instructions inside the battery case.



1 AA
battery

How To Use

- Hold the button to turn on/off.
- Press it quickly to cycle through 10 vibration modes.



Power
Button

Cleaning and Care

- Use a toy cleaner/mild soap with water to clean the product before and after each use.
- Pat with a towel and allow it to air-dry completely.
- Use with the water-based lube only, no silicone lubricants.
- The item can be sterilized with a 5% bleach solution or alcohol.



Warning

- Do not use on inflamed and injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes or for a use that has an adverse effect on any function of the body is prohibited.

edenfantasy
THE NEW INTIMACY

www.edenfantasy.com

Customer Service 24/7
Phone: +1 (770) 604 - 1352