edénfantasys



G-Wonder Vibe

PRODUCT MANUAL

10 massage modes

Beginner-friendly

Waterproof

Made from silicone and ABS plastic

Power

- The item is powered by 2 AAA batteries.
- Unscrew the base of the item to insert the batteries.
- Follow the polarity instructions inside the battery case.
- When storing for an extended period, please remove batteries from the device.



How To Use

- Hold the 😃 button to turn on/off.
- Press the *W* button quickly to cycle through 10 massage modes.



Cleaning and Care

- Use a toy cleaner/mild soap with water to clean the product before and after each use.
- Pat with a towel and allow it to air-dry completely.
- Use with water-based lube only, no silicone lubricants.



Warning

- Do not use on inflamed and injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes or for a use that has an adverse effect on any function of the body is prohibited.

edénfantasys

www.edenfantasys.com

Customer Service from 10 AM to 7 PM EST. Phone: +1 (770) 604 - 1352