edénfantasys



Hot affair

PRODUCT MANUAL

10 massage modes

2 powerful motors

Pleasure nubs

Waterproof

Made from silicone and ABS plastic

Charging

- For maximum pleasure charge before every use.
- Connect the included USB cable and insert the USB end into the wall adaptor or computer USB port (Computer must be turned on).
- The slow intermittent glow indicates charging in progress.
- A full charge takes up to 2 hours for 1.5 hours of play.
- Do not use the device while charging.
- The remote control is powered by 1 CR2032 battery (included).



How To Use

Without remote control

- Hold the 😃 button to turn on/off.
- Press it quickly to cycle through 10 massage modes.

With the remote control

- Hold the 🕁 button on the toy to enter the standby mode. The LED light will flash.
- Press the **W** button on the remote to cycle through 10 massage modes for the upper motor.
- Hold it to turn the motor off.
- Press the substant button on the remote to cycle through 10 massage modes for the lower motor.
- Hold it to turn the motor off.



Cleaning and Care

- Use a toy cleaner/mild soap with water to clean the product before and after each use.
- Pat with a towel and allow it to air-dry completely.
- Use with the water-based lube only, no silicone lubricants.
- The item can be sterilized with a 5% bleach solution or alcohol.



Warning

- Do not use on inflamed and injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes or for a use that has an adverse effect on any function of the body is prohibited.

edénfantasys

www.edenfantasys.com

Customer Service 10 AM - 7 PM EST Phone: +1 (770) 604 - 1352