



lla

10 vibration modes

2 powerful motors

Flexible G-spot attachment

Waterproof

Made from silicone and ABS plastic


Charging

- For maximum pleasure charge before every use.
- Connect the included USB cable and insert the USB end into the wall adaptor or computer USB port (Computer must be turned on).
- The slow intermittent glow indicates charging in progress.
- A full charge takes up to 45 minutes for 1 hour of play.
- Do not use the device while charging.



USB charging port

How To Use

- Hold the  button to turn on/off.
- Press it quickly to cycle through 10 vibration modes.
- Press the **+** button to increase vibration intensity.
- Press the **-** button to reduce vibration intensity.



Cleaning and Care

- Use a toy cleaner/mild soap with water to clean the product before and after each use.
- Pat with a towel and allow it to air-dry completely.
- Use with the water-based lube only, no silicone lubricants.



Warning

- Do not use on inflamed and injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes or for a use that has an adverse effect on any function of the body is prohibited.

edenfantasy
THE NEW INTIMACY

www.edenfantasy.com

Customer Service 24/7
Phone: +1 (770) 604 - 1352