# edénfantasys



# Inara

**PRODUCT MANUAL** 

# 10 vibration modes

**5** vibration intensities

Heats up to 118°F

Made from silicone

Waterproof

## Charging

- For maximum pleasure charge before every use.
- Connect the included USB cable and insert the USB end into the wall adaptor or computer USB port (Computer must be turned on).
- The slow intermittent glow indicates charging in progress.
- A full charge takes up to 2 hours for 1 hour of play.



### How To Use

- Hold the **O** button to turn on/off.
- Press the **M** button to cycle through 10 powerful vibration modes.
- Press the **S** button to cycle through 5 vibration intensities.

#### Heating

- Hold **M** and **S** buttons together to turn heating mode on/off.
- All three light indicators will turn red.
- Allow up to 5 mins for the toy to warm up.



# **Cleaning and Care**

- Use a toy cleaner/mild soap with water to clean the product.
- Pat with a towel and allow it to air-dry completely.
- Use with the water-based lube only, no silicone lubricants.
- The item can be sterilized with a 5% bleach solution or alcohol.



# Warning

- Do not use on inflamed and injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes or for a use that has an adverse effect on any function of the body is prohibited.

Customer Service 24/7 Phone: +1 (770) 604 - 1352

# edénfantasys

#### www.edenfantasys.com