

# Inflatable cheek spreader

PRODUCT MANUAL

---

**Inflatable**

---

**10 massage modes**

---

**Waterproof**

---

**Made from silicone**

## Charging

---


- For maximum pleasure charge before every use.
- Connect the included USB cable and insert the USB end into the wall adaptor or computer USB port (Computer must be turned on).
- The slow intermittent glow indicates charging in progress.
- A full charge takes up to 90 minutes for 1 hour of play.
- Do not use the device while charging.




USB  
charging  
port

## How To Use

---

- Apply water-based lubricant on yourself and the toy before starting the play.
- Hold the  button to turn on/off.
- Press it quickly to cycle through 10 massage modes.
- To inflate the butt plug, begin pumping slowly - you should feel a gentle stretching sensation.
- Press **Quick Release Valve** before removing the toy.

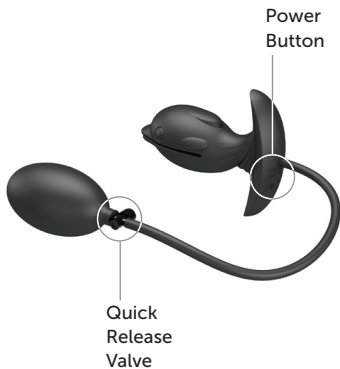

## Cleaning and Care

---

- Use a toy cleaner/mild soap with water to clean the product before and after each use.
- Pat with a towel and allow it to air dry completely.
- Use with the water-based lube only, no silicone lubricants.
- Please avoid contact with silicone or silicone-containing materials as it may damage the product.



## Warning

---

IF PAIN OR DISCOMFORT OCCURS,  
IMMEDIATELY RELEASE PRESSURE  
USING QUICK RELEASE VALVE AND  
DISCONTINUE USE

- Do not use on inflamed and injured areas.
- Adult novelty only. Use for medical purposes or for a use that has an adverse effect on any function of the body is prohibited.

**edenfantasy**  
THE NEW INTIMACY

[www.edenfantasy.com](http://www.edenfantasy.com)

Customer Service  
10 AM to 7 PM ET  
Phone: +1 (770) 604 - 1352